



Turning a MT2 Taper Driver

Start with a 1" square X 4 1/4" long Hardwood Block
Mount between Centers & Turn Both ends as shown

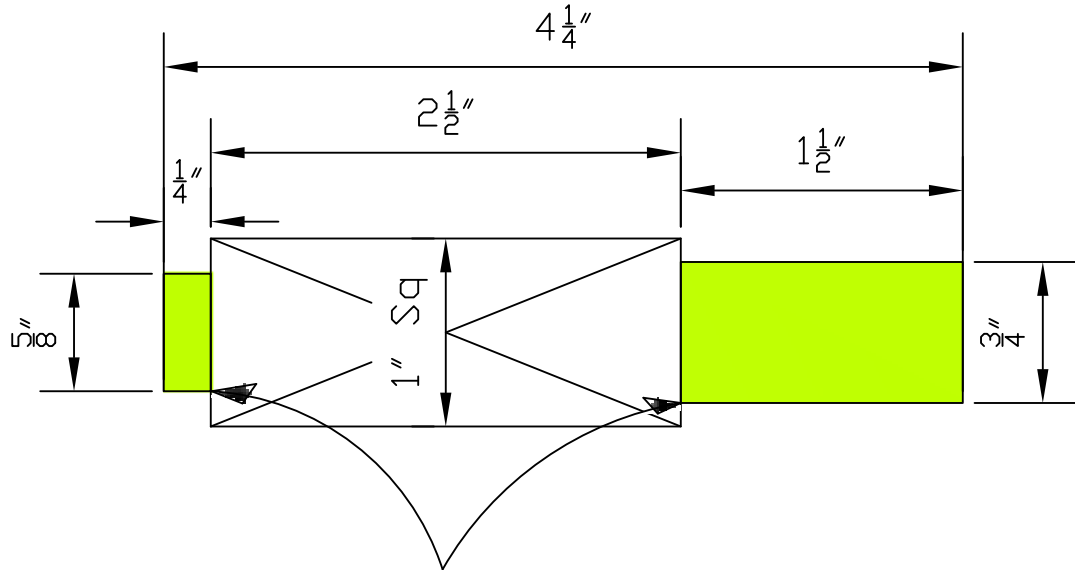

Next blend a taper through the 2 points shown above.
Use a straight edge to assure a good fit.

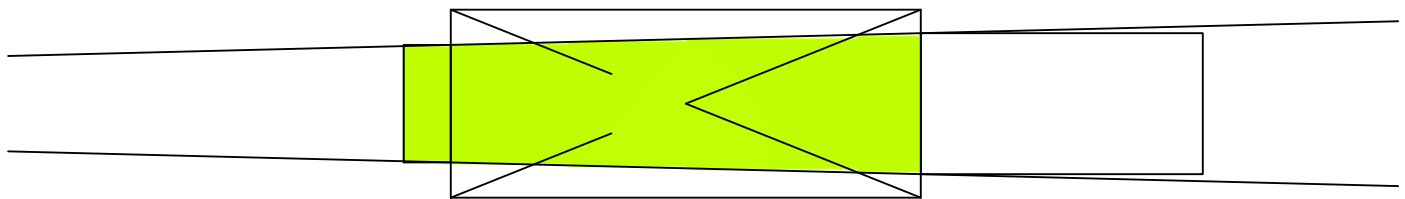

Not to Scale